

Table of Contents

Getting Started	1
Introduction	3
About this Manual	3
Quick Start Tutorial	5
Analysis Overview	5
Defining the Slope	6
Limits	6
Define Slope	7
Defining Materials	9
Assigning Materials	11
Graphical Method of Assignment	12
Data Tips	13
Defining Rock Seeders	15
Throwing the Rocks	17
Graphing the Results	18
Chart Properties	19
Statistics	19
Copy Raw Data	20
Envelope Graphs	21
Distribution Graphs	22
Adjusting the Sampling Locations	23
Tiling the Views	24
Re-running the Analysis	25
Clearing the Rock Paths	25
Simulation Parameters	26
Exporting Images	27

Export Image File.....	27
Copy to Clipboard.....	27
Black and White Images (Grayscale)	27
Info Viewer	28

Barriers and Collectors Tutorial 31

Barrier Overview	32
Adding a Barrier	32
Default Barrier Properties	34
Throwing the Rocks	34
Changing the Barrier Properties	36
Barrier Capacity	37
Graphing Barrier Results	38
Data Collectors Overview	41
Adding a Data Collector	41
Throwing the Rocks	43
Graphing Data Collector Results	44
Statistics	45
Distribution Graphs vs. Collector Graphs.....	46

Vertex Variation Tutorial 47

Edit Seeder.....	48
New Material.....	48
Assign Material	50
Verify Changes	50
Vertex Variation	51
Throwing the Rocks	53
Sensitivity Analysis	55

Getting Started

ROCFALL is designed to work on Windows 95, 98 and Windows NT 4.0 operating systems.

To install ROCFALL on your computer:

1. Insert the CD-ROM.
2. Setup should begin automatically displaying the main Rocscience Installation window.
3. If not, select Add / Remove Programs from the Control Panel and click on the Install button. Follow the directions until the main Rocscience Installation window is displayed.
4. Click on the ROCFALL button.
5. Click on the INSTALL FULL VERSION button.
6. Follow the installation instructions. During installation you will be asked to enter your seventeen character alphanumeric serial number. Enter the serial number located on the outside of the CD case to install the program. Proceed until the installation is complete and you are back to the Rocscience Installation window.
7. Click on the RETURN button.
8. If you have NOT previously installed the hardlock driver software for any other Rocscience program proceed with step 9. Otherwise go to step 13.
9. Click on the HARDLOCK button.
10. Click on the INSTALL DRIVER FOR 95,98,NT button.

11. Proceed until the hardlock driver installation is complete and you are back to the Rocscience Installation window.
12. Click on the RETURN button.
13. Click on the EXIT button.
14. To run ROCFALL, you will also need the hardlock supplied with the program. The hardlock must be attached to the parallel port on your computer during execution of the program. Attach the ROCFALL hardlock to the parallel port of your computer.
15. The installation process creates a ROCSCIENCE menu in your START...PROGRAMS menu. In the ROCSCIENCE menu there will be a ROCFALL menu containing the ROCFALL application. Run the ROCFALL application.
16. If you are a first time user, follow the "Quick Start Tutorial" presented in this manual, to get acquainted with the basic features of ROCFALL.

Introduction

ROCFALL is a statistical analysis program designed to assist with a risk assessment of slopes at risk of rockfalls. Energy, velocity and "bounce height" envelopes for the entire slope are determined by the program as is the location of rock endpoints.

ROCFALL can also assist in determining remedial measures: the material properties of each slope segment can be changed and the analysis re-run, comparing the results. Information about the kinetic energy and location of impact on a barrier can help determine the capacity, size and location of barriers.

ROCFALL provides various ways of interacting with other Windows programs. All input and output data (formatted in tabular form) and screen captures, can be "pasted" into a word processor for speedy report writing. ROCFALL also allows "raw" data (e.g. the impact location on a barrier) to be "pasted" into a spreadsheet for more detailed analysis. (e.g. determining what fraction of the impact locations were above a certain height; or fitting a probability distribution to the data).

About this Manual

This manual consists of the following tutorials:

1. A Quick Start tutorial, to get new users acquainted with the basic features of ROCFALL.
2. A Barriers and Collectors tutorial.
3. A Vertex Variation tutorial.

This manual is intended as a hands-on, getting started user's guide. For more information on any ROCFALL options that are not discussed in these pages, consult the ROCFALL Help system.

In this manual, instructions such as:




Select: Slope → Define Slope

are used to navigate the menu selections.

When a toolbar button is displayed in the margin, as shown above, this indicates that the option is available in a ROCFALL toolbar. *This is always the recommended and quickest way to use the option.*

Quick Start Tutorial

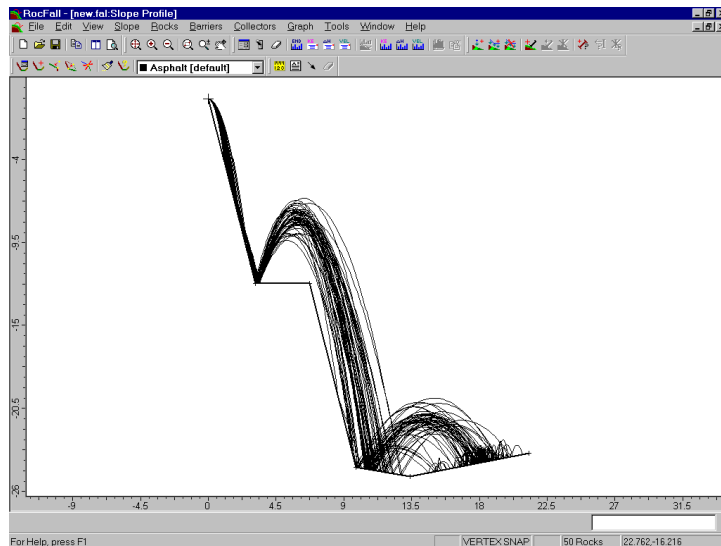

This “quick start” tutorial will demonstrate the basic features of the program, and show you how to perform a basic RocFall.

If you have not already done so, run ROCFALL by double-clicking on the ROCFALL icon in your installation folder. Or from the Start menu, select Programs → Rocscience → RocFall → RocFall.

If the ROCFALL application window is not already maximized, maximize it now, so that the full screen is available for viewing the model.

Analysis Overview

A typical ROCFALL analysis can be performed in a few minutes, and will consist of the following steps:

1. Define the slope.
2. Define the slope materials.
3. Assign the materials to the slope segments.
4. Define the rock starting locations (seeders).
5. Throw the rocks down the slope.
6. Graph the results.

In addition, Barriers and Data Collectors can be defined, as discussed in Tutorial 2. This Quick Start Tutorial will take you through the basic steps 1 – 6 outlined above, to perform a simple ROCFALL analysis. *Note:* the model created in this tutorial can also be found in the SIMPLE.FAL file in the EXAMPLES folder in your ROCFALL installation folder.

Defining the Slope

Before we start, note that when the ROCFALL program is started, a new blank document is already opened, allowing you to begin creating a model immediately.

The user can create a new document at any time, by selecting the New option from the File menu or the Standard toolbar.

Limits

Before we define the slope, let's set the limits of the drawing region, so that we can see the slope being created as we enter the geometry.

Select: View → Limits

Enter the following minimum and maximum x-y coordinates in the Set Limits dialog:

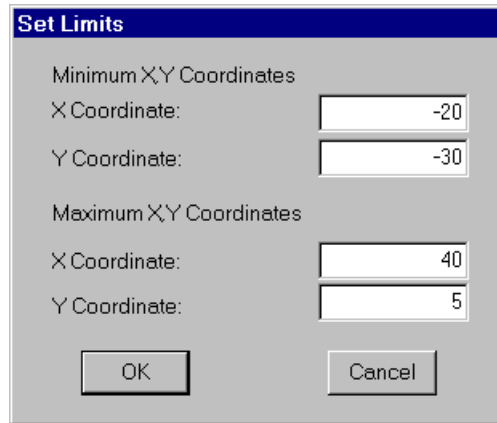


Figure 1-1: Set Limits dialog.

These limits will more or less center the slope in the drawing region, when you enter it as described below.

Define Slope

To create the slope, select Define Slope from the Slope menu or the Slope toolbar.



Select: Slope → Define Slope

Enter the following coordinates in the prompt line at the bottom right of the screen.

```
Enter vertex [enter=done] : 0 0
Enter vertex [enter=done] : 3.1 -12.2
Enter vertex [enter=done] : 6.7 -12.2
Enter vertex [enter=done] : 9.8 -24.4
Enter vertex [enter=done] : 13.4 -25
Enter vertex [enter=done] : 21.3 -23.5
Enter vertex [enter=done] : press Enter
```

Note that pressing the Enter key enters each coordinate pair. When the last vertex has been entered, pressing the Enter key again adds the slope to screen, and exits the Define Slope option.

Note that the slope can also be created graphically in ROCFALL, by simply clicking the left mouse button at the desired coordinates while using Define Slope. (The Grid and Grid Snap options are helpful for entering exact coordinates graphically.)

Your screen should now look as follows:

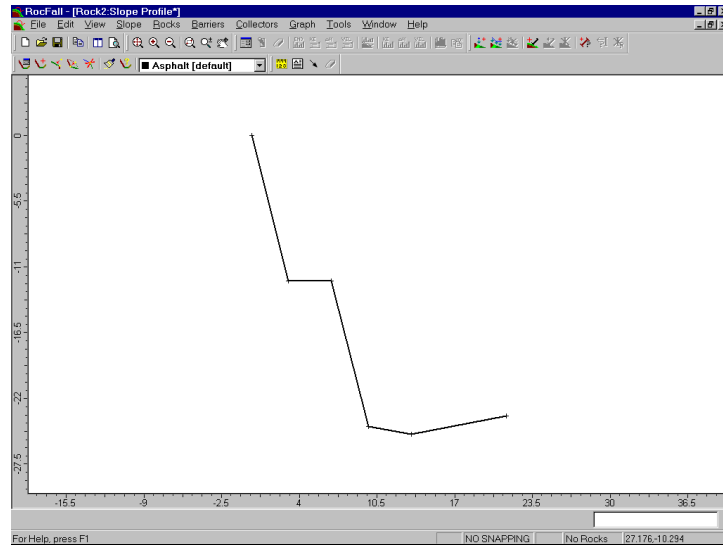


Figure 1-2: Slope geometry defined.

Defining Materials

To define the slope material properties, select Material Editor from the Slope toolbar or the Slope menu.



Select: Slope → Material Editor

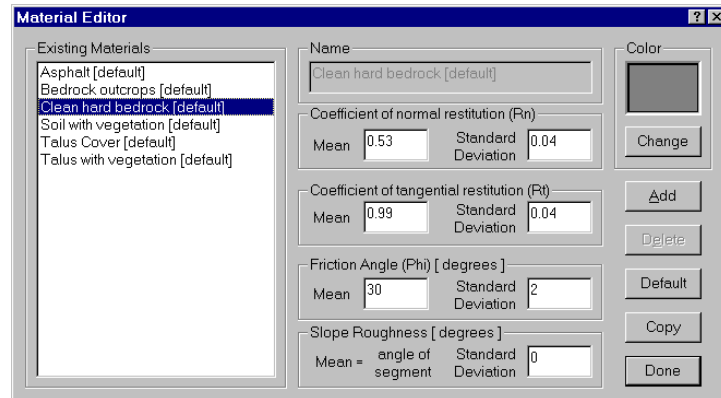


Figure 1-3: Material Editor dialog.

In the Material Editor dialog, you will notice that a number of default materials have been pre-defined for your convenience. However, for this tutorial, we will define three new materials, as described below.

1. Select the Add button in the Material Editor dialog, and notice that “New Material” appears in the Existing Materials list.
2. Change the name of this new material to Type One, and enter the properties given in Table 1-1.
3. Repeat steps 1 and 2 to define two more new materials named Type Two and Type Three. See Table 1-1 for properties.

Name	Rn (mean sd)	Rt (mean sd)	Phi (mean sd)	Rough- ness (sd)	Color
Type One	0.8 0.03	0.8 0.03	30 0	0	Black
Type Two	0.7 0.03	0.8 0.03	30 0	0	Green
Type Three	0.5 0.03	0.5 0.03	30 0	0	Pink

Table 1-1: New material properties.

- When you are finished entering all of the properties, select the Done button in the Material Editor dialog.

You are now ready to assign the material properties to the slope.

NOTE:

- Standard deviations are NOT mandatory. If you would like a property specified “exactly” by its mean value, then simply enter a standard deviation of 0.0 (zero) for that property.
- Note that the slope colours have no bearing on the analysis, and are simply used for identification purposes.

Assigning Materials

Material properties are assigned to the slope segments with the Slope Editor dialog, available in the Slope menu or the Slope toolbar. (Materials can also be assigned graphically with the mouse. This is described in the next section).



Select: Slope → Slope Editor

Let's assign our newly defined materials (Type One, Type Two and Type Three) as follows:

1. In the Slope Editor dialog, click the mouse in the **SECOND** row of the Material column, and select Type One from the drop-down list of available materials. This will assign the material Type One to the SEGMENT between vertices 1 and 2.
2. Click the mouse in the **THIRD** row of the Material column, and select Type Two. This will assign the material Type Two to the SEGMENT between vertices 2 and 3.
3. Proceed in this manner, until the materials are assigned as shown in Figure 1-4.

Vertex	X [m]	std dev	Y [m]	std dev	Material
1	0.000	0.000	0.000	0.000	
2	3.100	0.000	-12.200	0.000	Type One
3	6.700	0.000	-12.200	0.000	Type Two
4	9.800	0.000	-24.400	0.000	Type One
5	13.400	0.000	-25.000	0.000	Type Three
6	21.300	0.000	-23.500	0.000	Type Three

☐ Use standard deviations when generating slope vertices


Common std dev... Copy OK Cancel

Figure 1-4: Slope Editor dialog.

Graphical Method of Assignment

Although we illustrated the slope material assignment using the Slope Editor dialog, material assignment can also be done graphically with the mouse, using:

 - The “Assign” toolbar button (the “paintbrush” button) in the Slope toolbar, in conjunction with the pull-down list of material names.



In most cases you will find it easier to graphically assign materials, rather than use the Slope Editor dialog. To assign materials graphically, simply:



1. Select the Assign toolbar button.
2. Select a material from the list in the Slope toolbar.
3. Select slope segments with the left mouse button. (Multiple segments can be selected with a selection window. Click AND HOLD the left mouse button and drag to create a window).
4. When finished, press the Enter key or right-click the mouse and select Done.

Tip:

If you right-click the mouse on a slope segment and select Assign Material, this will display the Slope Editor dialog, with the current material for the clicked-on segment already highlighted. Use the Slope Editor dialog as described previously, to assign a different material.

Data Tips

A useful feature of ROCFALL are the “data tips” which appear when you place the cursor for a few moments, over entities of the model.

For example, if you place the cursor over a segment of the slope, the material properties of the slope segment will be displayed, as illustrated below.

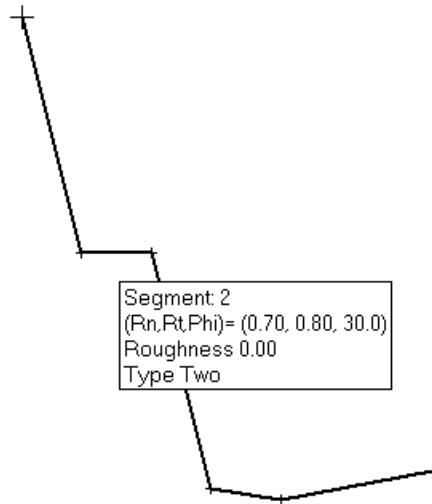


Figure 1-5: Data tip for slope properties.

If you place the cursor directly over a vertex of the slope, the data tip will display the x-y coordinates of the vertex (and the standard deviations used, if any).

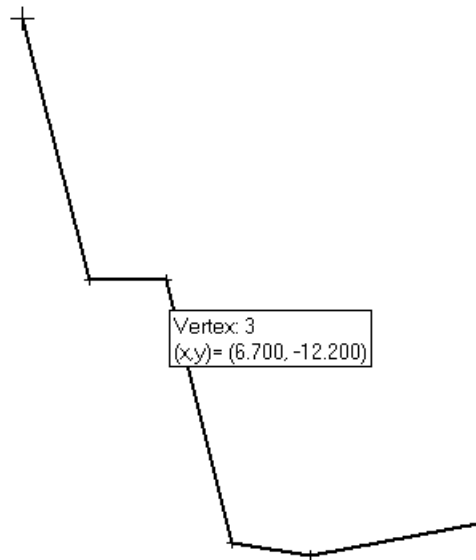


Figure 1-6: Data tip for vertex coordinates.

Data tips allow you to quickly check on model properties onscreen while viewing the model, without having to return to the data input dialogs, etc.

Data tips are available for all ROCFALL model entities, also including seeders, barriers and data collectors.

Defining Rock Seeders

The final mandatory step to complete a ROCFALL model is to define the initial conditions for the rocks (location, mass and velocity).

Rock starting locations can be defined as either:


- POINTS (Add Point Seeder option) or
- LINES (Add Line Seeder option).

For this tutorial, we will simply add a single point seeder (ie. All rocks will originate from one location). Select Add Point Seeder from the Rocks toolbar or the Rocks menu.



Select: Rocks → Add Point Seeder

1. Right-click the mouse and select Vertex Snap from the popup menu.
2. Move the cursor near the first slope vertex (ie. The vertex at 0 , 0). When the cursor is close to the vertex, it will “snap” to the exact location of the vertex (since we turned Vertex Snap on in step 1).
3. When the cursor (blue cross) is snapped to the vertex, click the left mouse button, and the Define Initial Conditions dialog will appear.

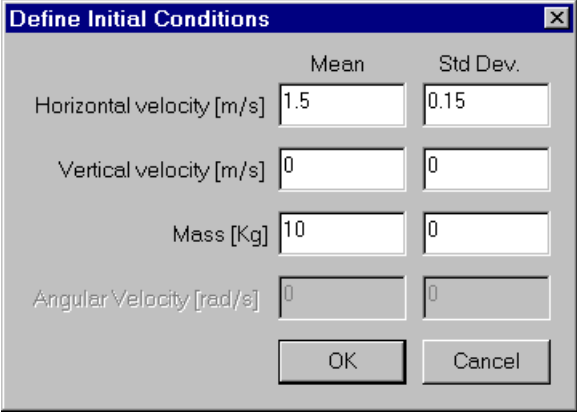

The dialog box titled "Define Initial Conditions" contains two columns: "Mean" and "Std Dev.". It has four rows of input fields for "Horizontal velocity [m/s]", "Vertical velocity [m/s]", "Mass [Kg]", and "Angular Velocity [rad/s]". The values are 1.5, 0.15, 0, 0, 10, 0, 0, and 0 respectively. "OK" and "Cancel" buttons are at the bottom right.

	Mean	Std Dev.
Horizontal velocity [m/s]	1.5	0.15
Vertical velocity [m/s]	0	0
Mass [Kg]	10	0
Angular Velocity [rad/s]	0	0

Figure 1-7: Define Initial Conditions dialog.

Enter a Mean Horizontal velocity = 1.5 and a standard deviation = 0.15. Leave all other parameters as shown in Figure 1-7. Select OK.

This completes the modeling. You are now ready to run the simulation (ie. Throw the rocks down the slope).

Note that rock seeder “data tips” are also available. Hover the mouse over the point seeder at (0 , 0) and you should see the initial conditions we just defined.

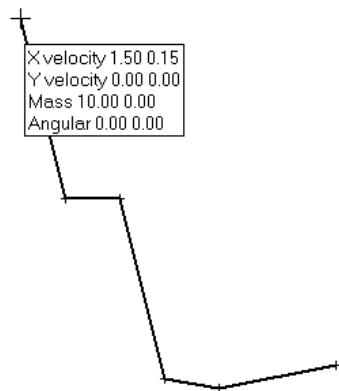


Figure 1-8: Data tip for seeder properties.

Throwing the Rocks



To run the ROCFALL analysis, select the Throw Rocks option from the Rocks menu or the Graph toolbar.

Select: Rocks → Throw Rocks

The calculation should only take a few seconds or less, and your screen should look similar to Figure 1-9.

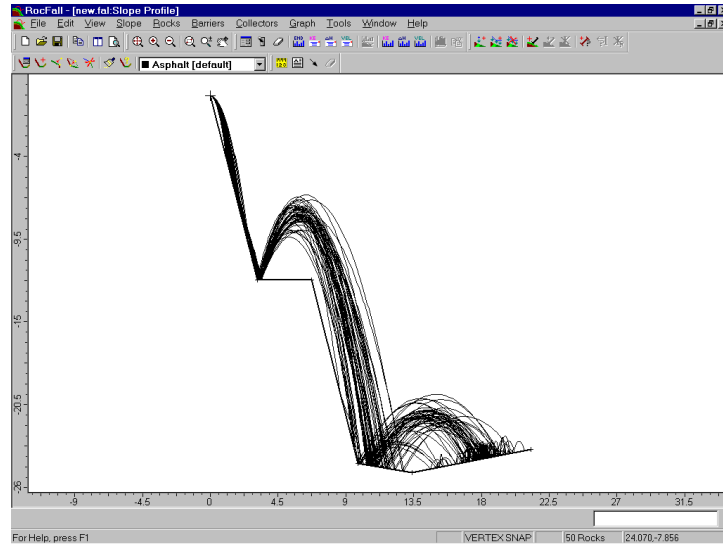


Figure 1-9: Results of ROCFALL analysis (50 rocks).

Remember that since the program is sampling probability distributions, the results will be different each time the analysis is run with the same input data. Therefore, if your results appear slightly different from those in Figure 1-9, don't worry, this is to be expected.

For this analysis, the default number of 50 rocks was used. This number is entered in the Simulation Parameters dialog, discussed at the end of this tutorial. However, let's graph some results first!

Graphing the Results

One of the most common and easily understood results from a ROCFALL analysis, is the horizontal location of endpoints.



Select: Graph → Endpoints

Your screen should look similar to Figure 1-10.

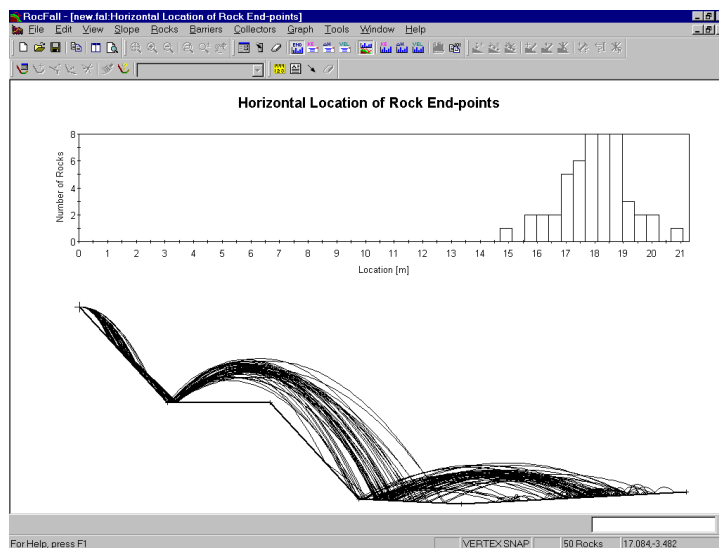


Figure 1-10: Endpoints graph (split-screen view).

By default, when a graph is first generated in ROCFALL, it is presented in a Split View format, with the slope shown in the lower half of the screen as a visual reference. (NOTE that the slope is vertically compressed in this view, ie. the X and Y axes are not to the same scale).

The Split View mode can be toggled on or off at any time, by selecting the Split View option from the Graph toolbar or the Graph menu.



Select: Graph → Split View

The graph is now maximized in the view.

Chart Properties

Right-click on the graph and select Chart Properties.

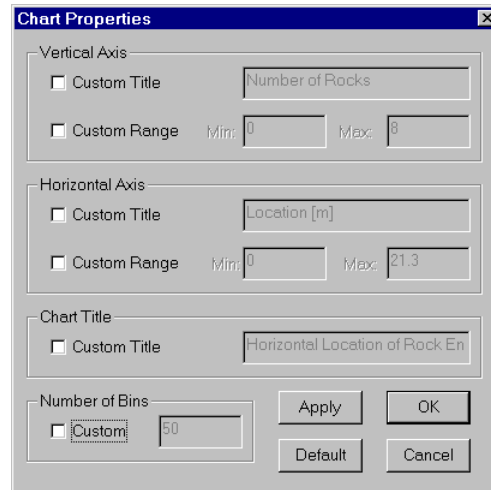


Figure 1-11: Chart Properties dialog.

The Chart Properties dialog allows the user to customize the vertical and / or horizontal ranges, as well as axis and graph titles. This is left as an optional exercise. Select OK or Cancel.

Statistics

Right-click on the graph and select Statistics. A dialog displaying graph statistics will be displayed, as shown in Figure 1-12.

Scroll down to view the information in the Statistics dialog.

Notice the Copy button in the Statistics dialog. Selecting this button allows you to copy the information in the Statistics dialog, to the Windows clipboard. From the clipboard, it can be pasted into wordprocessing or spreadsheet programs, for further analysis, or report writing.

Select OK to close the Statistics dialog.

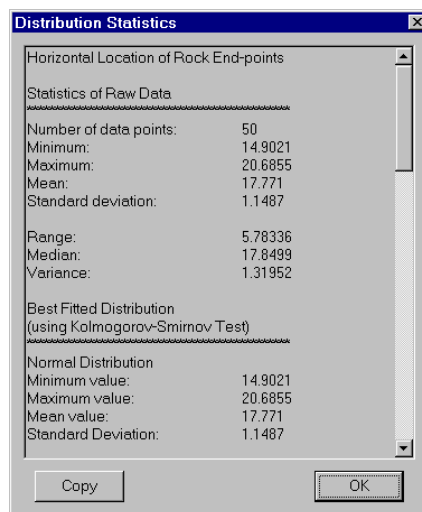


Figure 1-12: Distribution Statistics dialog.

Copy Raw Data



In the Graph toolbar and the Edit menu, you will notice a Copy Raw Data option. This allows the user to copy the raw data used to generate graphs, to the Windows clipboard. From the clipboard, the raw data can be pasted into wordprocessing or spreadsheet programs, for further analysis, or report writing. This allows you, for example, to perform “custom” analyses that are not available with ROCFALL. For instance you could copy the “raw” data associated with the rock endpoints into your spreadsheet, sort the data and fit an unusual probability distribution to the data.

Envelope Graphs

Kinetic Energy, Velocity and Bounce Height envelopes can also be generated. Select each of these options from the Graph toolbar or the Graph menu, and view the results.

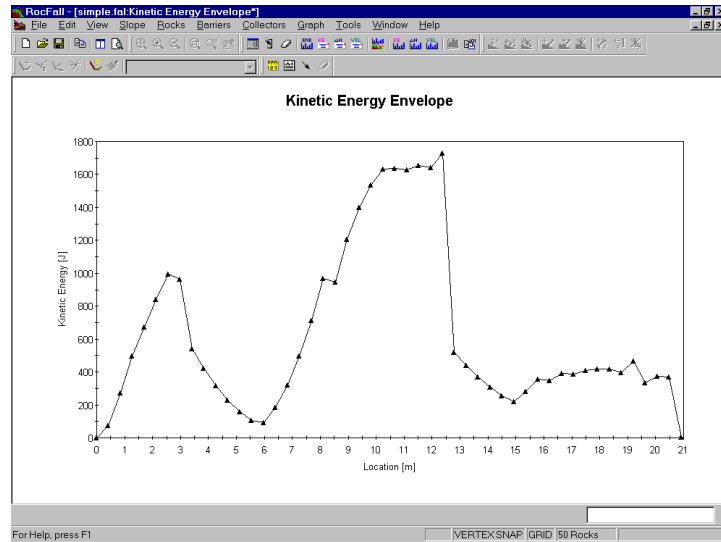


Figure 1-13: Kinetic Energy Envelope (Split View toggled OFF).

Note:



- Each graph is initially generated with the Split View option toggled ON. This can be toggled ON or OFF at any time, as described earlier for the Endpoints graph.
- When the Kinetic Energy, Velocity or Bounce Height options are initially selected, a new view is generated. *Only one view of each graph type can exist.* If these options are re-selected AFTER a graph has been initially generated, the active view will simply revert to the selected graph. A new view will NOT be generated in this case.

Distribution Graphs

Kinetic Energy, Velocity and Bounce Height distribution graphs can be generated by selecting these options from the Graph toolbar or the Graph menu.

The distribution graphs show the distribution of results at X locations along the slope. For example:



Select: Graph → Kinetic Energy Distribution

Your screen should look similar to Figure 1-14.

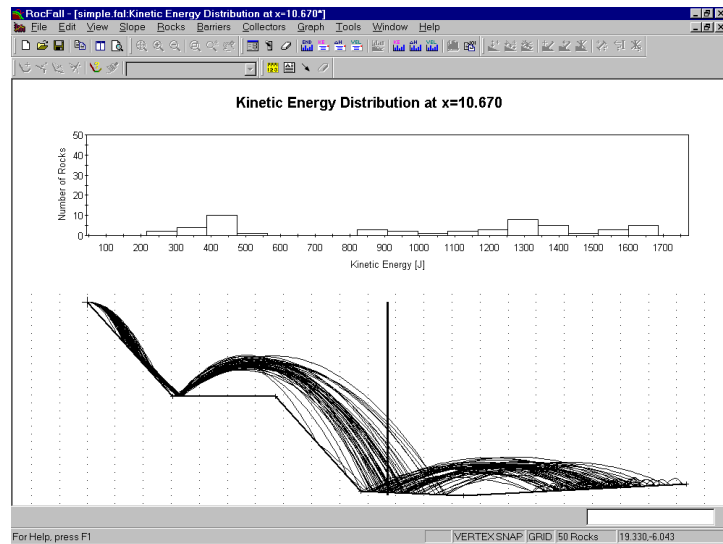


Figure 1-14: Kinetic Energy Distribution at $x = 10.67$.

Note the following properties of the distribution graphs:

- A thick vertical line on the slope marks the X location of the data sampling. To sample data at other locations, simply click the left mouse button anywhere on the slope. The vertical line will indicate the selected position, and the graph will immediately be updated.

- If you click AND HOLD the left mouse button on the slope, you can drag the vertical line marker along the slope, and the graph will be updated as the line is moved.
- The sampling location can also be moved with the left / right arrow keys or the mouse wheel (if your mouse has a mouse wheel).

Adjusting the Sampling Locations

The X locations of the data sampling are determined by the horizontal extent of the slope divided by the Number of Sampling Intervals in the Simulation Parameters dialog. In general, these X locations will not be round numbers.

To obtain round numbers for the X locations of the data sampling on the distribution graphs, you can:

- adjust the Number of Sampling Intervals in the Simulation Parameters dialog, and / or
- modify the total X extent of the slope (eg. Extend or shorten the first or last segment so that the total horizontal extent of the slope is a round number.)

EXAMPLE: if the total X extent of the slope is 50 meters, and the Number of Sampling Intervals is 100, this will provide sampling at 0.5 meter intervals along the slope).

Distributions at exact X locations can also be obtained by defining Data Collectors at the desired locations, and graphing the results for the collector(s). See the Barriers and Collectors tutorial for details.

Tiling the Views

If you wish, you can now tile the views.



Select: Window → Tile Vertically

Depending on how many graphs you have generated, and whether or not you have the Split View option toggled on or off on each view, your screen may look something like Figure 1-15.

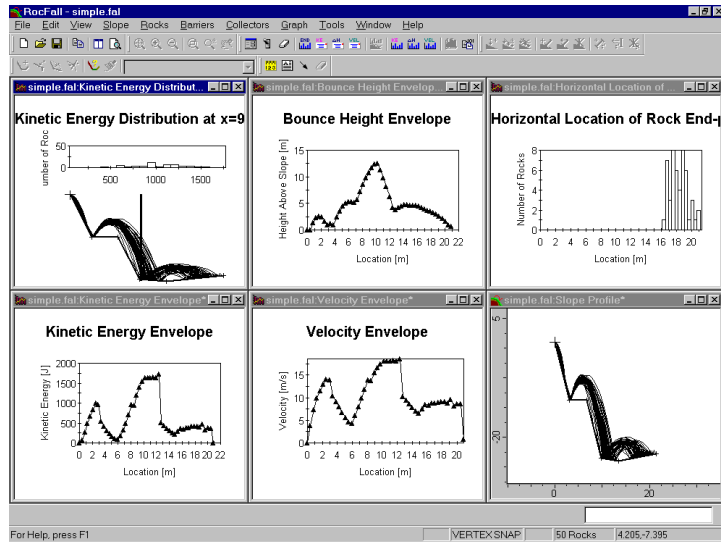


Figure 1-15: Tiled views.

Re-running the Analysis

You can re-run the analysis by re-selecting the Throw Rocks option as many times as desired.



Select: Rocks → Throw Rocks

All views and graphs will be updated with the cumulative results of all rocks thrown. Note that the total number of rocks thrown is displayed in the status bar. (For example, if you selected Throw Rocks five more times, the status bar would indicate 300 rocks thrown).



Clearing the Rock Paths

To start a new ROCFALL analysis with a clean slate, select the Clear Rock Paths option from the Graph toolbar or the Rocks menu.



Select: Rocks → Clear Rock Paths

This will erase all existing rock paths on the slope, and erase all previously collected data. Any graph views that may have been open will indicate “No Data Available”.

Note that ROCFALL automatically clears the rock paths any time that changes are made to the model which would invalidate the currently displayed results. For example, if a new material is assigned to a slope segment, ROCFALL will automatically reset the rock paths.

Simulation Parameters

For this Quick Start tutorial, we used the default Simulation Parameters. Let's take a quick look at the Simulation Parameters dialog, and make a couple of changes, and re-run the analysis.



Select: Rocks → Simulation Parameters

Figure 1-16: Simulation Parameters dialog.

Change the Number of Rocks to Throw to 500, and change the Number of Sampling Intervals to 100. Select OK.



Re-run the analysis again (select Throw Rocks), and plot graphs as before.

Note the speed of the analysis (500 rocks should still only take a few seconds to compute). It is important to note that the Number of Sampling Intervals is used during the ROCKFALL calculations, and determines the frequency of data collection along the rock paths, and also affects the speed of the analysis. Any time the Number of Sampling Intervals is changed, a new ROCKFALL analysis must be performed (previous results will automatically be erased).

Exporting Images

In ROCFALL, various options are available for exporting image files.

Export Image File

The Export Image File option in the File menu or the right-click menu, allows the user to save the current view directly to one of four image file formats:

- JPEG (*.jpg)
- Windows Bitmap (*.bmp)
- Windows Enhanced Metafile (*.emf)
- Windows Metafile (*.wmf)

Copy to Clipboard



The current view can also be copied to the Windows clipboard using the Copy option in the Standard toolbar or the Edit menu. This will place a bitmap image on the clipboard which can be pasted directly into word or image processing applications.

Black and White Images (Grayscale)



A very useful option in ROCFALL is the Grayscale option, available in the Tools toolbar, the right-click menu or the View menu. This will automatically convert the current view to Grayscale, suitable for black and white image requirements. This is very useful when sending images to a black and white printer, or for capturing black and white image files.

The Grayscale option works as a toggle, and all previous colour settings of the current view will be restored when Grayscale is toggled off

Info Viewer

The Info Viewer option in the File menu (and the Standard toolbar) displays a summary of all ROCFALL model parameters in its own view. This includes:

- Slope geometry
- Slope materials
- Seeder properties
- Simulation parameters
- Barrier and collector properties



Select: File → Info Viewer

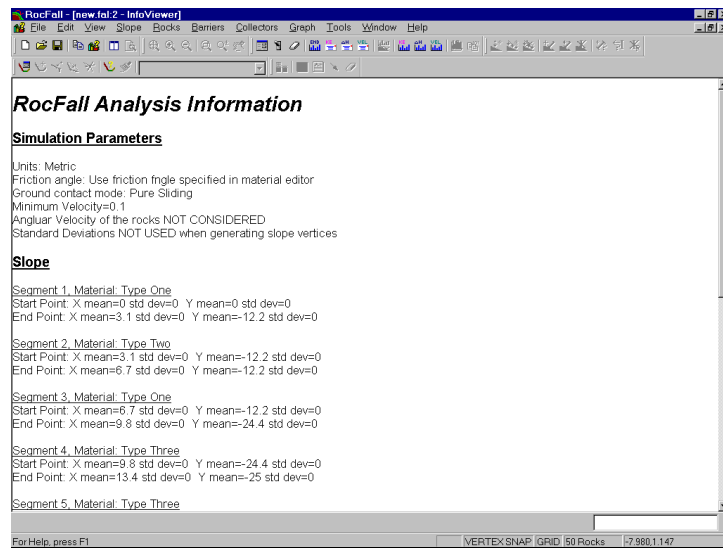


Figure 1-17: ROCFALL Info Viewer listing.

The Info Viewer information can be copied to the clipboard using the Copy option in the Standard toolbar or the Edit menu, or by right-clicking in the view and selecting Copy to Clipboard. From the clipboard, the

information can be pasted into word processing programs for report writing.

The Info Viewer information can also be sent directly to your printer using the Print option in the File menu.


NOTE that analysis results are NOT recorded in the Info Viewer. However, as discussed earlier in this tutorial:

- Graph results can be copied to the clipboard with the Copy Raw Data option in the Edit menu.
- Graph statistics are available with the Statistics option in the Graph menu.

That concludes this Quick Start Tutorial. To exit the program:

Select: File → Exit

Barriers and Collectors Tutorial

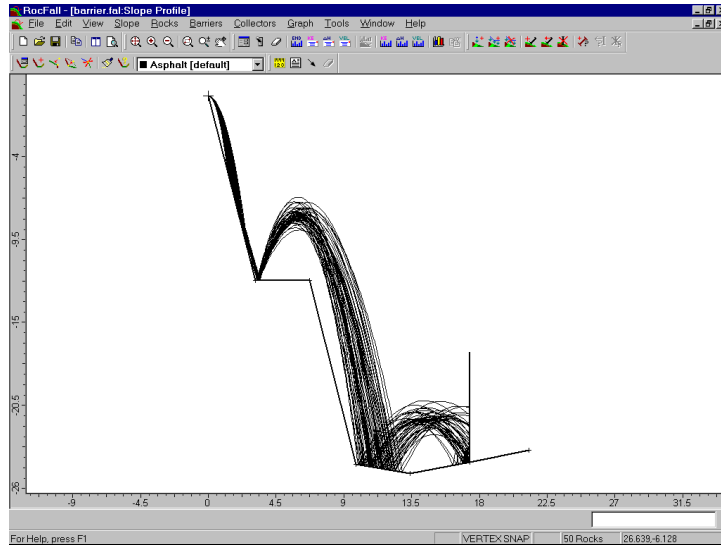

This tutorial will demonstrate how to add Barriers and Collectors to a ROCFALL model, and interpret the results.

If you have not already done so, run ROCFALL by double-clicking on the ROCFALL icon in your installation folder. Or from the Start menu, select Programs → Rocscience → RocFall → RocFall. If the ROCFALL application window is not already maximized, maximize it now, so that the full screen is available for viewing the model.

We will start with the same model we created in the previous “quick start” tutorial. This file is available in the SIMPLE.FAL file in the EXAMPLES folder in your ROCFALL installation folder.



Select: File → Open

Navigate to the EXAMPLES folder in your ROCFALL installation folder, and open the SIMPLE.FAL file.

Barrier Overview

A Barrier in ROCFALL is a line segment with one end on the slope surface, which can be placed anywhere along the slope in order to alter the paths of the rocks as they travel down the slope.

Barrier properties may be defined as:

- Perfectly Inelastic ($R_n=R_t=0$)
- Perfectly Elastic ($R_n=R_t=1$)
- Custom (any intermediate coefficients of restitution between 0 and 1).
- In addition, barriers can be assigned a breaking capacity in terms of the maximum energy before rocks break through.

Any number of barriers can be added to the slope. However, barriers cannot cross other barriers and cannot cross slope segments.

Adding a Barrier



To add a barrier to the slope, select the Add Barrier option from the Barriers menu or the Rocks toolbar.

Select: Barriers → Add Barrier

Since the first point of a barrier line segment must always be on an existing slope segment, you will notice a cross marker move along the slope as you move the cursor. This marker indicates the point on the slope nearest to the cursor location, and is an aid for graphically adding the first barrier vertex to the slope by clicking the left mouse button.

However, for this example, we will enter exact coordinates in the prompt line, since it is difficult to enter exact coordinates graphically.

```
Select location for the first endpoint  
[esc=cancel]: 17.35 -24.25  
Select location for the second endpoint  
[esc=cancel]: 17.35 -17
```

Your model should now look like Figure 2-1:

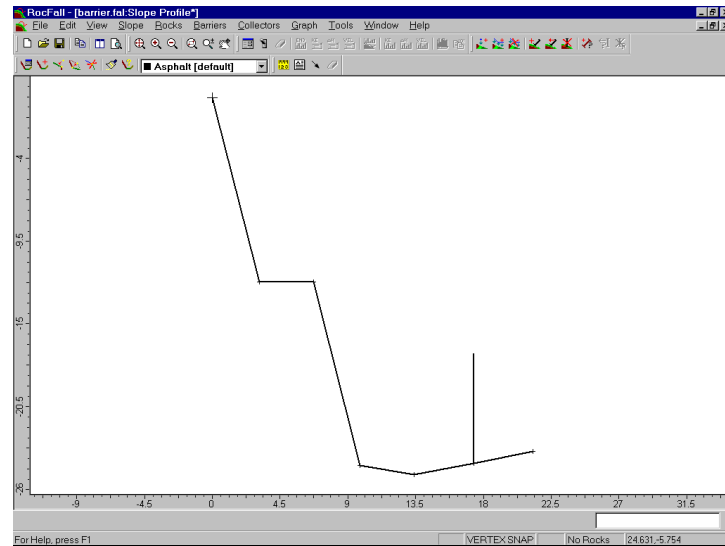


Figure 2-1: Barrier added to slope.

As you can see, we have added a vertical barrier at the midpoint of the last segment of the slope.

You will also notice that the existing rock paths, which were present when we loaded the file, were reset when the barrier was added. This is done automatically by ROCFALL, since a new analysis is required whenever a barrier (or a data collector) is added to the model.

Default Barrier Properties

When a barrier is first added in ROCFALL, the default properties of the barrier are Perfectly Inelastic ($R_n = R_t = 0.0$).

Barrier properties can be changed in the Barrier Editor dialog. This will be discussed shortly. However, let's first run the analysis using the default properties.

Throwing the Rocks



Run the analysis by selecting the Throw Rocks option from the Rocks menu or the Graph toolbar.

Select: Rocks → Throw Rocks

The calculation should only take a few seconds, and your screen should look similar to Figure 2-2.

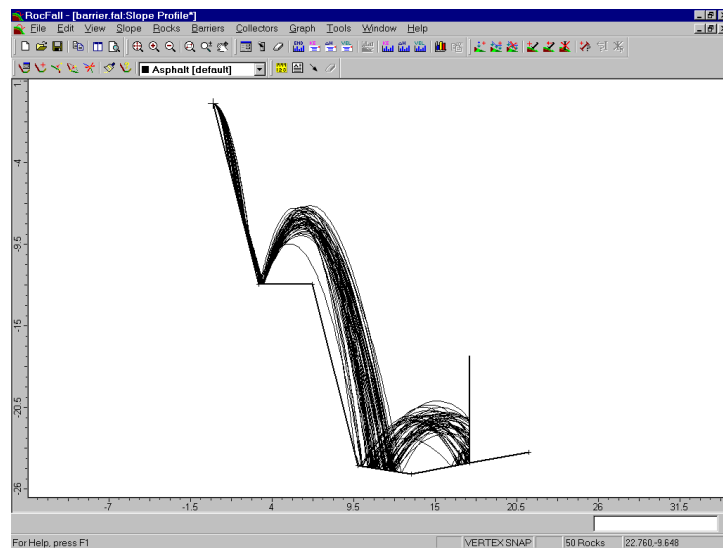


Figure 2-2: ROCFALL analysis with barrier.

Since the barrier is “perfectly inelastic” all rock paths which intersect the barrier come to a complete stop and do NOT rebound, but simply fall straight down to the bottom of the barrier and come to rest.

As an optional exercise, you can verify this by:



- Zooming in to the barrier (use the Zoom Window option) and observing the rock path intersections with the barrier.



- Plot an Endpoints Graph (select Graph→ Endpoints) and observe that nearly all rock paths terminate at the barrier (a few bounce short and fall back down the slope). See Figure 2-3.

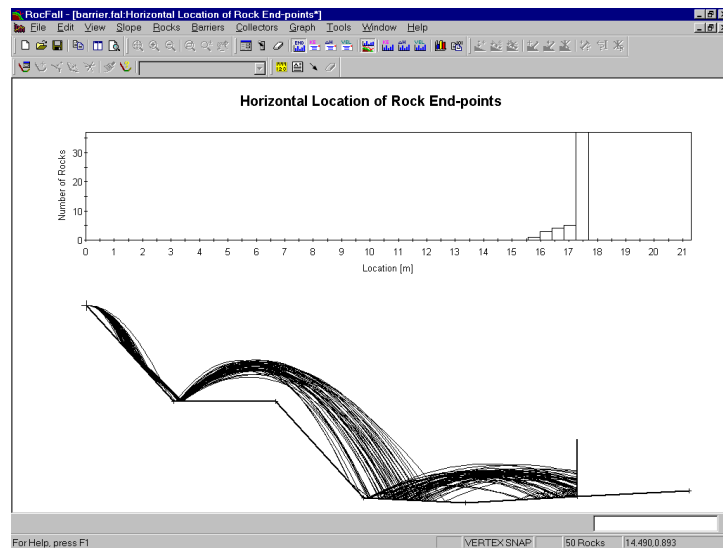


Figure 2-3: Endpoints Graph (Perfectly Inelastic barrier).

If you performed the above optional steps, close the Endpoints Graph, and reset the slope view by selecting Zoom All from the Zoom toolbar (or you can press the F2 function key to Zoom All).



Changing the Barrier Properties

Barrier properties can be modified with the Barrier Editor dialog. This is available through the Barriers menu, however, a convenient shortcut is to right-click on a barrier, and select Edit Barrier from the popup menu. Do this now.

Change the barrier from Perfectly Inelastic ($R_n = R_t = 0$) to Perfectly Elastic ($R_n = R_t = 1$). Select the Perfectly Elastic checkbox, and select Done.

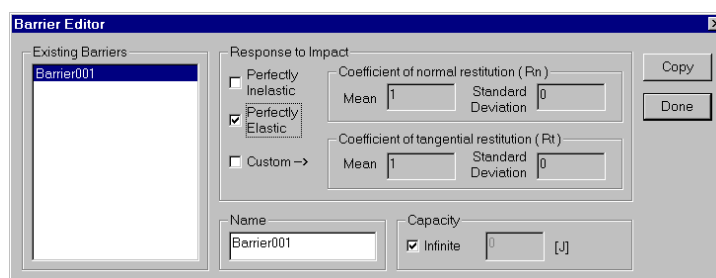


Figure 2-4: Barrier Editor dialog.

Now re-run the analysis.



Select: Rocks → Throw Rocks

As described in the previous section, use Zoom Window to zoom in to the barrier and observe the rock paths. Since the barrier is Perfectly Elastic, all rocks now bounce off the barrier, and no longer “stick” to the barrier, as they did when the properties were Perfectly Inelastic.

This will be evident if you view the Endpoints Graph.



Select: Graph → Endpoints

Compare Figures 2-3 and 2-5. As you can see, the rocks now bounce off the barrier and come to rest at various locations to the left of the barrier.

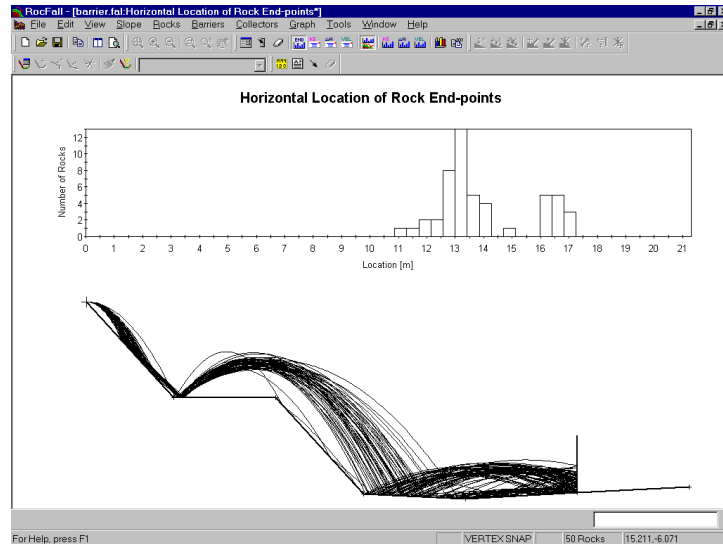


Figure 2-5: Endpoints Graph (Perfectly Elastic barrier).

Close the Endpoints Graph, and if you zoomed in to the barrier as suggested earlier, press F2 to Zoom All.

Of course, real barriers are not Perfectly Elastic or Perfectly Inelastic.

As an optional exercise, select the Custom checkbox in the Barrier Editor dialog, and enter values between 0 and 1 for the Normal and Tangential Coefficients of Restitution, and re-run the analysis.

Barrier Capacity

Barriers in ROCFALL can be assigned a capacity in terms of the energy required to break through the barrier. Any rocks that contact the barrier with a kinetic energy exceeding the barrier capacity will pass through the barrier, with a reduced velocity. Let's demonstrate this.

1. Right click on the barrier, and select Edit Barrier.



2. In the Barrier Editor dialog, de-select the Infinite Capacity checkbox, enter a capacity = 100 Joules, and select Done.
3. Re-run the analysis (select Throw Rocks), and observe that some rock paths now pass through the barrier. Use Zoom Window to zoom in to the barrier, as shown in Figure 2-6.

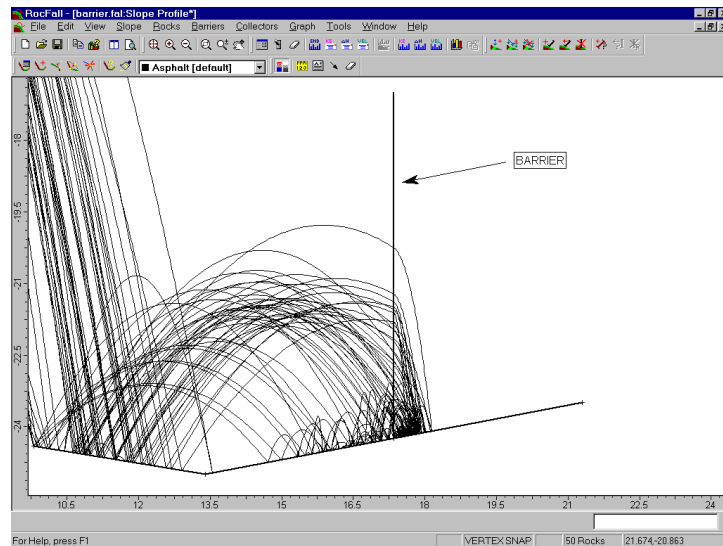


Figure 2-6: Rocks passing through barrier with finite capacity.

Before we continue, reset the barrier capacity to Infinite in the Barrier Editor dialog. Press F2 to Zoom All. Select Throw Rocks to re-run the analysis.

Graphing Barrier Results

For each barrier, the following results can be graphed:

- X or Y (horizontal or vertical) impact locations on the barrier
- Impact Velocity

- Impact Energy

Select the Barrier and Collector Graphs option from the Graph menu or the Graph toolbar.



Select: Graph → Barrier and Collector Graphs

In the Graph dialog, select all three checkboxes and select Done.

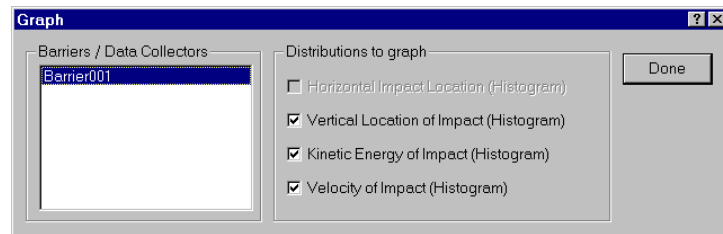


Figure 2-7: Graph dialog for Barriers and Collectors.

- *Note* – the Horizontal Impact Location graph is not available, since the barrier in this case is vertical.

You have now generated three graphs for the barrier. Tile the views so that you can view all graphs at once.



Select: Window → Tile Vertically

Your screen should look similar to Figure 2-8.

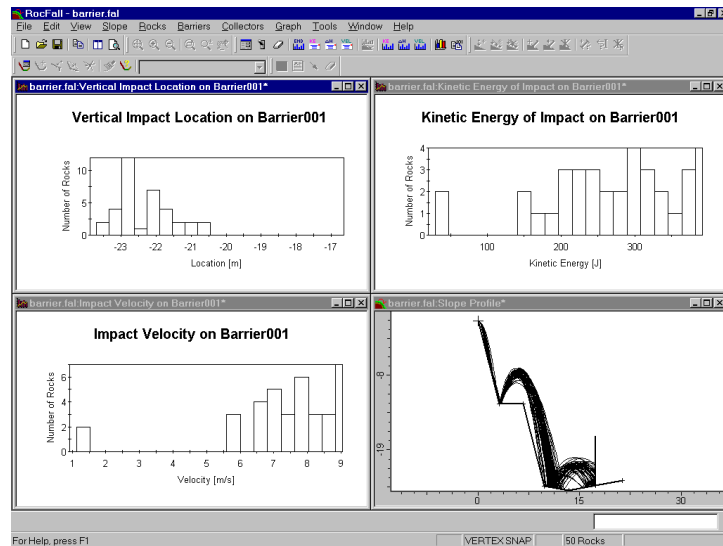


Figure 2-8: Barrier graph results.

Note that an alternative shortcut for generating Barrier Graphs, is to right-click on a barrier, and select the desired graph.



As an optional exercise, select **Throw Rocks** several times, and observe that all graphs are immediately updated to reflect the cumulative results of all rocks thrown.

When you are finished examining the graphs, close the three graph views, and maximize the Slope view.

That concludes this introduction to barriers in ROCFALL, we will now move on to our discussion of Data Collectors.

Data Collectors Overview

A “data collector” in ROCFALL is simply a line segment that gathers information about the rocks that pass through the data collector while the rocks are being thrown down the slope. “Data collectors” record the velocity, kinetic energy, vertical location, and horizontal location of all rocks that pass through the data collector as they travel down the slope.

- Unlike barriers, data collectors do not affect the movement of the rocks in any way.
- Data collectors do not have any properties associated with them (other than the endpoints defining their location), and do not have any directionality (i.e. it doesn’t matter which end is the starting point and which end is the ending point).
- There is no restriction on the number of data collectors or where they can be placed. They may intersect or cross the slope, barriers, or other data collectors at any location.

Adding a Data Collector

To add a data collector to the model, select the Add Data Collector option from the Collectors menu or the Rocks toolbar.



Select: Collectors → Add Data Collector

1. Right-click the mouse and select Vertex Snap from the popup menu.
2. Move the cursor near the lowermost slope vertex at (13.4, -25). The cursor should snap to the exact location of the vertex.

3. Click the left mouse button to enter this as the first point of the data collector.
4. Now let's enter the second point through the prompt line.

```
Select location for the second endpoint  
[esc=cancel]: 13.4 -17
```

Your model should look like Figure 2-9. (The text and arrows were added with the Add Text and Add Arrow options in the Tools menu. This is left as an optional exercise).

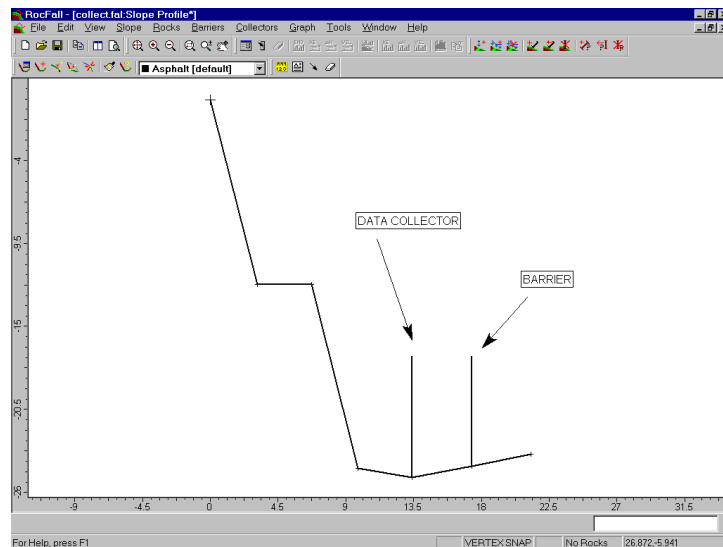


Figure 2-9: Data Collector added to model.

As you can see, we have added a vertical data collector to the left of the existing barrier.

Notice that the existing rock paths were reset when the data collector was added. This is done automatically by ROCFALL, since a new analysis is required whenever a barrier or a data collector is added to the model.

Throwing the Rocks



Run the analysis by selecting the Throw Rocks option from the Rocks menu or the Graph toolbar.

Select: Rocks → Throw Rocks

The calculation should only take a few seconds, and your screen should look similar to Figure 2-10.

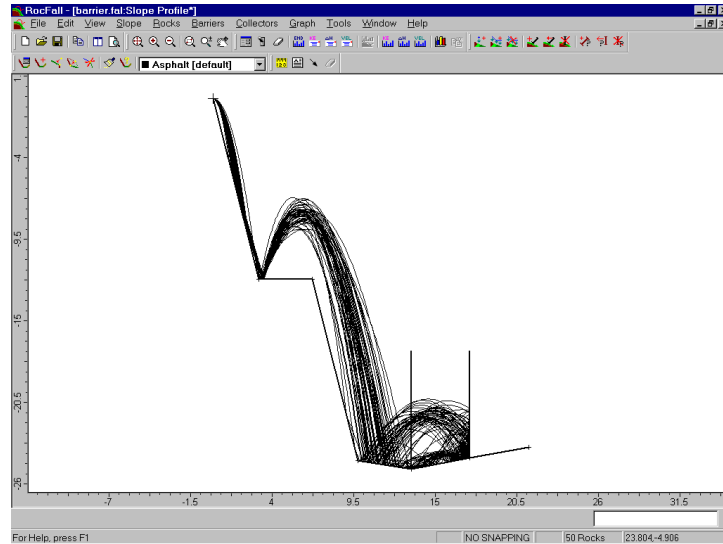


Figure 2-10: ROCFALL analysis with barrier and collector.

As you can see, the data collector has no effect on the rock paths.

We can now graph results for the data collector in exactly the same way that barrier results were graphed.

Graphing Data Collector Results

Graphs for Barriers and Collectors can be generated using the Barrier and Collector Graphs dialog, available in the Graph menu and the Graph toolbar. This was demonstrated earlier for the barrier graphs.

An alternative to using this dialog, is to simply right-click on a barrier or collector, and select the desired graph. Let's demonstrate this now.

Right click on the collector, and select Graph Y-Impact Location from the popup menu. Your screen should look similar to Figure 2-11.

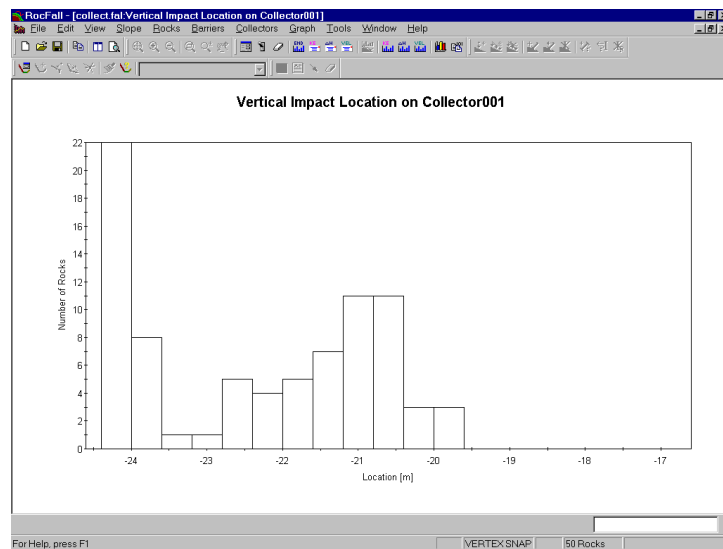


Figure 2-11: Vertical Impact Location for Collector.

Note that the impact locations are in terms of the absolute coordinates of your model, rather than relative coordinates (ie. measured from one end of the collector).

Statistics

To view statistics for this graph, right click on the graph and select Statistics from the popup menu. You will see the following dialog.

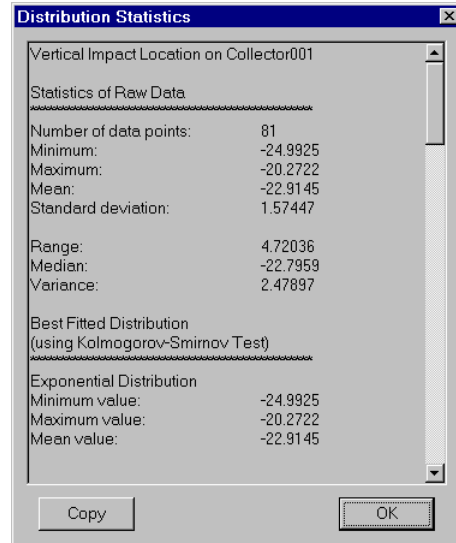


Figure 2-12: Collector statistics (Y-Impact location).

Notice that the number of data points is 81, but we only threw 50 rocks.

This is because collectors record data each time that a rock path crosses the collector. In this case, many of the rocks crossed the collector a second time, after bouncing off of the barrier.

In general, the number of data points recorded on a barrier or collector graph will not necessarily be equal to the number of rocks thrown, and will depend on how many times each rock path actually intersected the barrier or collector.

Distribution Graphs vs. Collector Graphs

To wrap up this tutorial, we will make an important point concerning Distribution Graphs and Collector Graphs in ROCFALL.

In most cases, data collection is required along vertical lines at given X locations along the slope. For this purpose, the Distribution Graph options in the Graph menu are provided, ie.

- Kinetic Energy Distribution
- Height Distribution
- Velocity Distribution


These graphs allow the user to quickly view distributions along the entire extent of the slope (see the Quick Start tutorial for details).

Distribution Graphs are actually derived from a series of equally spaced “invisible” vertical data collectors automatically generated by ROCFALL when the analysis is run. The spacing of these collectors is determined by the Number of Sampling Intervals in the Simulation Parameters dialog, and the total X extent of the slope.

In most cases, the Distribution Graphs will provide the user with the desired data. The Data Collectors option described in this tutorial should only be necessary in the following cases:

- If data collection along a non-vertical line is required, then Data Collectors must be used.
- If data collection at exact X locations is required, then it may be necessary to define Data Collectors, since the Distribution Graphs only provide results at the intervals determined by the Number of Sampling Intervals and the X extent of the slope.

Vertex Variation Tutorial

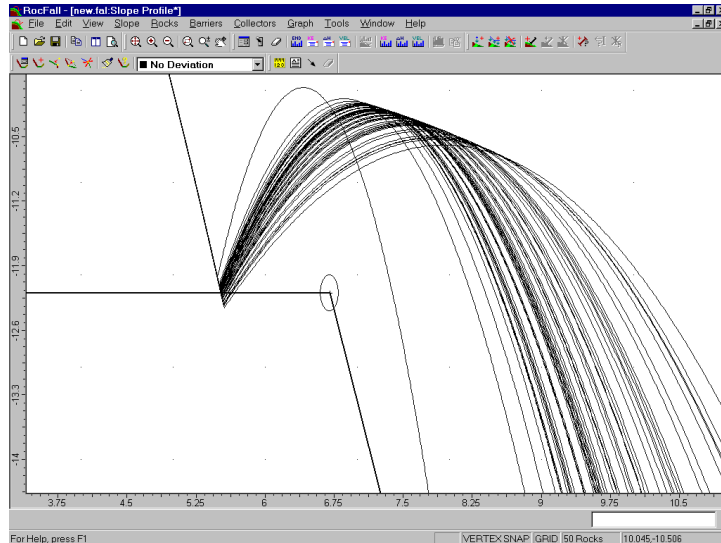

In ROCFALL, standard deviations can be applied to the coordinates of any or all slope vertices. This allows the user to account for uncertainty in measurements, or to simulate a pseudo 3-D rockfall analysis (ie. to simulate minor variations in a slope profile).

If you have not already done so, run ROCFALL by double-clicking on the ROCFALL icon in your installation folder. Or from the Start menu, select Programs → Rocscience → RocFall → RocFall. If the ROCFALL application window is not already maximized, maximize it now, so that the full screen is available for viewing the model.

This tutorial will also be based on the SIMPLE.FAL file, which you should find in the EXAMPLES folder in your ROCFALL installation folder.



Select: File → Open


Navigate to the EXAMPLES folder in your ROCFALL installation folder, and open the SIMPLE.FAL file.

We will now modify the SIMPLE.FAL file as follows.

Edit Seeder

First let's change the properties of the existing seeder. Right click the mouse on the existing point seeder (the blue cross at vertex (0 , 0) at the top of the slope), and select Edit Seeder from the popup menu.

Change the Horizontal Velocity (Mean) to 3.5 and Horizontal Velocity (Std. Dev.) to 0. Leave all other properties as shown in Figure 3-1. Select OK.

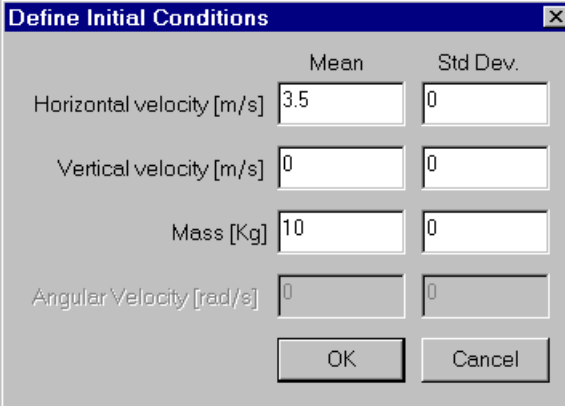

The image shows a dialog box titled "Define Initial Conditions" with a close button (X) in the top right corner. The dialog box contains four rows of input fields, each with a label and two columns: "Mean" and "Std Dev.". The first row is "Horizontal velocity [m/s]" with a Mean value of 3.5 and a Std Dev. value of 0. The second row is "Vertical velocity [m/s]" with both Mean and Std Dev. values set to 0. The third row is "Mass [Kg]" with both Mean and Std Dev. values set to 0. The fourth row is "Angular Velocity [rad/s]" with both Mean and Std Dev. values set to 0. At the bottom of the dialog box are two buttons: "OK" and "Cancel".

	Mean	Std Dev.
Horizontal velocity [m/s]	3.5	0
Vertical velocity [m/s]	0	0
Mass [Kg]	0	0
Angular Velocity [rad/s]	0	0

Figure 3-1: Changing the rock initial conditions.

Notice that all standard deviations for the rock initial conditions are now zero.

New Material

Now let's create a new material with no deviation in material properties, and apply this material to the entire slope.

Select Material Editor from the Slope toolbar or the Slope menu.



Select: Slope → Material Editor

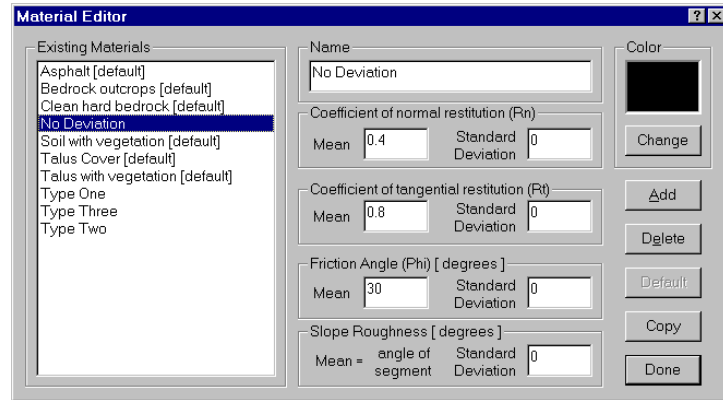


Figure 3-2: New material added in Material Editor dialog.

Define a new material called No Deviation as follows:

1. Select the Add button in the Material Editor dialog, and notice that “New Material” appears in the Existing Materials list.
2. Change the name of this new material to “No Deviation” and enter the properties shown below.

Name	Rn (mean sd)	Rt (mean sd)	Phi (mean sd)	Rough- ness (sd)	Color
No Deviation	0.4 0	0.8 0	30 0	0	Black

Table 3-1: New material properties.

3. When you are finished entering the properties, select the Done button in the Material Editor dialog.

You are now ready to assign the new material to the slope.

Assign Material

We will assign the new material to the entire slope, graphically using the mouse, as follows:



1. Select the Assign toolbar button (the “paintbrush” button).
2. Select the No Deviation material from the pull-down list of material names in the Slope toolbar.
3. Select the entire slope with a selection window (Click AND HOLD the left mouse button and drag to create a window that encloses the entire slope. When you release the mouse button, the material assignment will be made).
4. Press the Enter key or right-click the mouse and select Done.

Verify Changes

Let’s quickly verify that we have correctly entered the new properties. Select Throw Rocks, and you should see only a single rock path travel down the slope.



Select: Rocks → Throw Rocks

Since we have removed all statistical variation (standard deviation = 0) for the rock (seeder) initial conditions, and the slope material properties, all rocks thrown should take the same path. If this is the case, select Clear Rock Paths from the Rocks menu, and continue with the tutorial. If this is NOT the case (ie. Multiple rock paths are displayed), then go back and check that you have entered the correct seeder and material properties.

Vertex Variation

We are now ready to apply standard deviations to the slope vertices. Select Slope Editor from the Slope toolbar or the Slope menu.



Select: Slope → Slope Editor

1. In the Slope Editor dialog, select the “Use standard deviations when generating slope vertices” checkbox. This will allow you to enter standard deviations for the vertex coordinates.
2. For Vertex 3 (mean coordinates = 6.7, -12.2) enter an X standard deviation = 0.05 and a Y standard deviation = 0.10.
3. Select OK.

Vertex	X [m]	std dev	Y [m]	std dev	Material
1	0.000	0.000	0.000	0.000	
2	3.100	0.000	-12.200	0.000	No Deviation
3	6.700	0.050	-12.200	0.100	No Deviation
4	9.800	0.000	-24.400	0.000	No Deviation
5	13.400	0.000	-25.000	0.000	No Deviation
6	21.300	0.000	-23.500	0.000	No Deviation

☒ Use standard deviations when generating slope vertices

Common std dev... Copy OK Cancel

Figure 3-3: Standard Deviation added to Vertex 3 in Slope Editor dialog.

To keep things simple, we have only added standard deviation to a single vertex. This will make it easier to illustrate the effect of vertex variation in ROCFALL.

Vertices with standard deviations are drawn with a yellow ellipse centered around the vertex, indicating the variability of the vertex location.

The ellipse indicates the range where approximately 95% of the sampled vertices will be generated, since the ellipse extends from the mean vertex location TWO standard deviations in both the positive and negative directions. (eg. a vertex at (0 , 0) with a standard deviation of 1 in the X direction and 2 in the Y direction, would be surrounded by an ellipse extending from $X = -2$ to $X = 2$, and $Y = -4$ to $Y = 4$).



For this example, the ellipse is too small to be visible with the model at full scale, so let's zoom in to get a closer look. Use the Zoom Window option to zoom in on vertex 3, until your screen looks approximately like Figure 3-4.

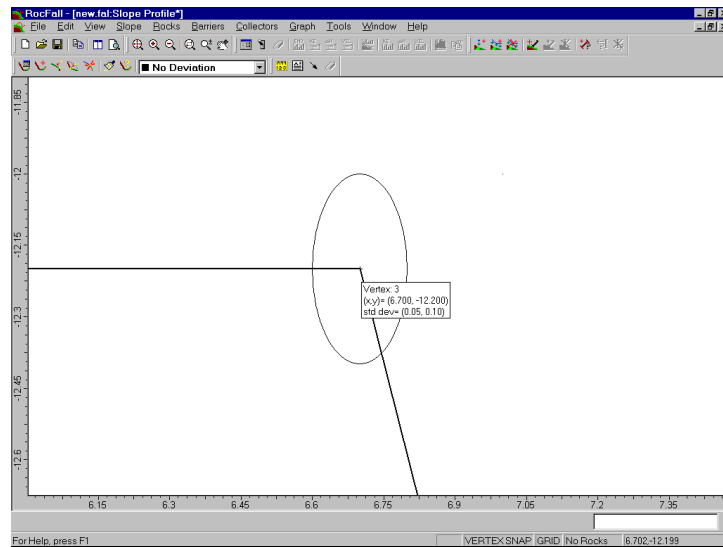


Figure 3-4: Ellipse indicating variability of vertex location.

(If you place the cursor directly over vertex 3 you will see the vertex “data tip”. Note the mean and standard deviations of the vertex coordinates are displayed.)



Select Zoom All to bring the model back to full view.

Throwing the Rocks



Now select Throw Rocks to run the analysis.

Select: Rocks → Throw Rocks

Your screen should look similar to Figure 3-5.

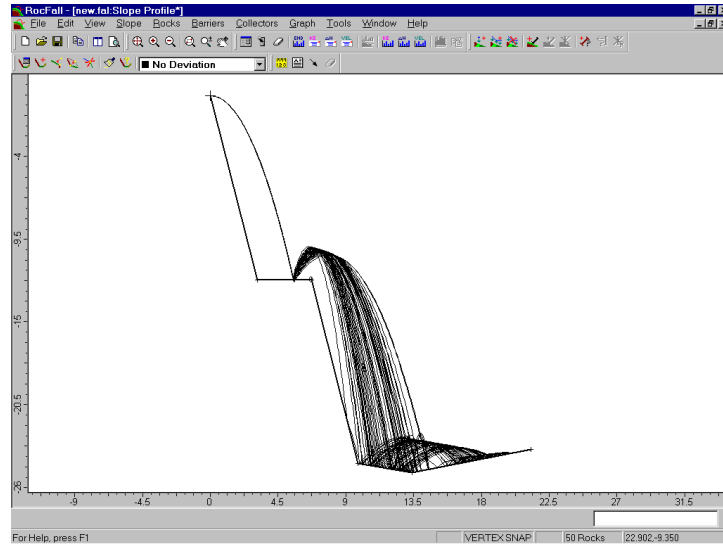


Figure 3-5: ROCFALL analysis with vertex variation.

As you can see, all rocks follow the same initial path, since there is zero variation in the seeder initial conditions.

However, when they reach the second segment of the slope, many diverging paths are created, due to the variation we applied to vertex 3.



Let's zoom in again to see what is going on. Use Zoom Window (you may also find Zoom Mouse and Pan useful) to zoom in to the first bounce location to the left of vertex 3, until your screen looks similar to Figure 3-6.

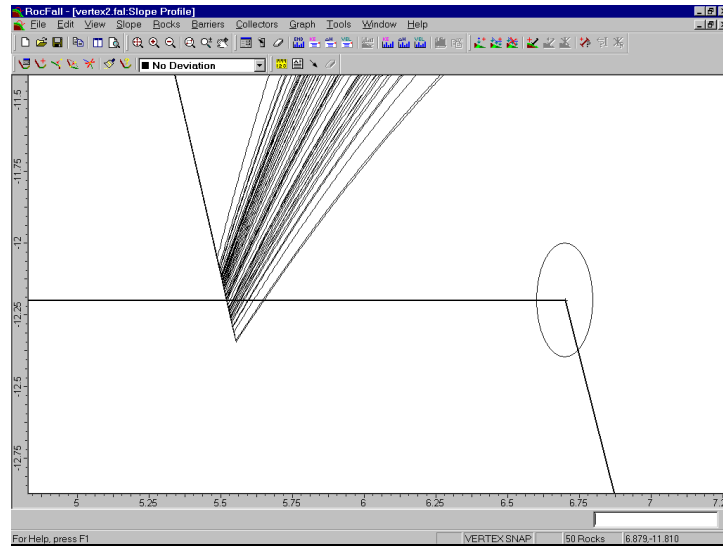


Figure 3-6: Zoom in on bounce location beside vertex 3.

Figure 3-6 illustrates how the rocks can now bounce off of points above and below the mean slope segment orientation.

Although only the mean slope segments are drawn, the rock paths indicate the range of actual slope segments generated by the statistical variation we applied to vertex 3. Effectively, a new slope is generated before each rock is thrown.

Note that the range of impact locations corresponds approximately to the extents of the ellipse (ie. If you visualize a segment joining vertex 2 to the ellipse extents around vertex 3, you can see that the upper and lower bounds of this segment would produce the impact locations we see after the analysis).

Sensitivity Analysis

When using vertex variation in ROCFALL, you will probably find it most useful to change the standard deviation of only one vertex at a time (leaving all other vertices with a standard deviation of 0). This will allow you to determine the sensitivity of the simulation to the location of that particular vertex. If you change the standard deviation of many vertices at once it may be difficult to determine which vertex has the most effect on the results and which have very little effect.